
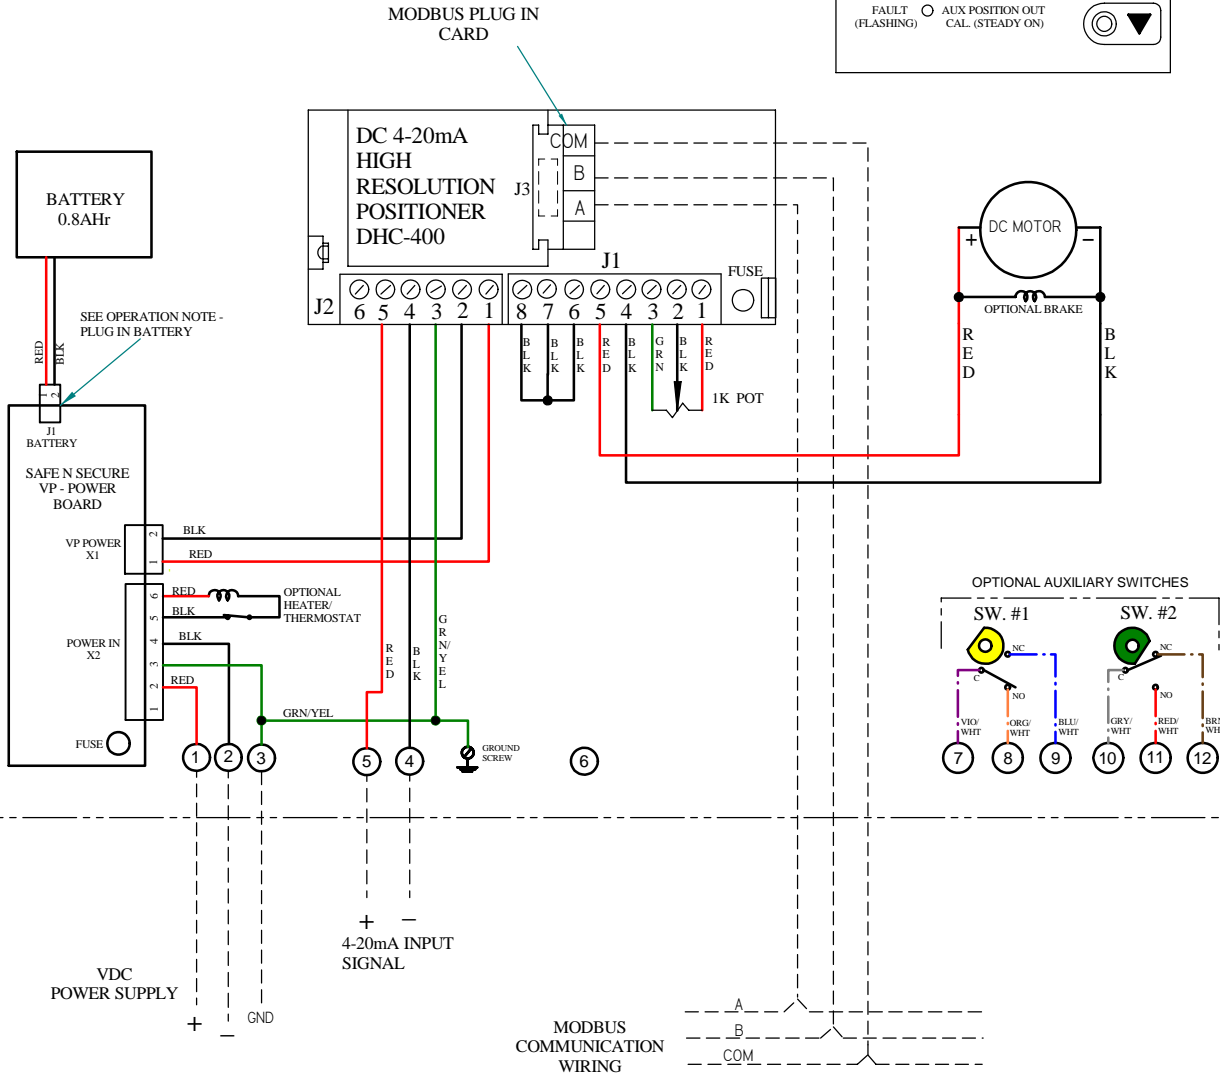
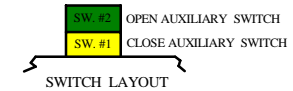


ACTUATOR SHIPPED IN OPEN POSITION
UNLESS OTHERWISE SPECIFIED

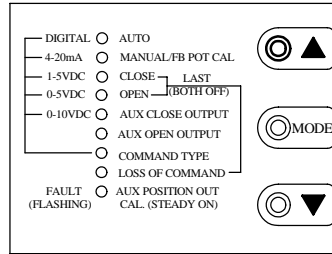

INSTRUCTIONS:

This actuator has been set at the factory. If calibration is required after the valve is installed, it is not necessary to adjust the potentiometer or limit switches.

1. Apply DC power to terminals 1 & 2.
2. Push MODE button until yellow "MANUAL/FB POT CAL" LED is illuminated. The LED may be flashing through the next several steps.
3. Using the UP & DOWN buttons, operate the actuator to the mid position.
4. If the LED is solid proceed to step 7.
5. If LED is flashing, loosen the set screw in potentiometer gear on the drive shaft and rotate gear until LED is no longer flashing. NOTE: The farther away from the potentiometer mid position the slower the flashing becomes.
6. Tighten set screw in potentiometer. The solid LED indicates that the potentiometer is set in the mid position.
7. Push MODE button until the "CLOSE" LED is illuminated. Use the up/down buttons to drive the actuator to the desired position. Be sure that the close limit switch is pressed in.
8. Push the "MODE" button until the "OPEN" LED is illuminated. Use the up/down buttons to drive the actuator to the desired position. Be sure the open limit switch is pressed in.
9. Push the mode key until the "Command Type" LED is lit. Push the up/down button to select the appropriate command signal, 4-20mA should be illuminated.
10. Push MODE button until "LOSS OF COMMAND" LED is illuminated. Use the UP/DOWN buttons to select the failure mode upon loss of command signal, stay in last position, drive open or drive close.
11. Push the MODE button until the red "AUX POSITION OUT CAL" LED illuminates while the "CLOSE LED" flashes.
12. Press the MODE button until the "Auto" LED is lit.
13. Use the OCM-101 Modbus Option Module Manual to complete the set up of the dip switches and programming for Modbus Communications.
14. Actuator is now calibrated and ready.

OPERATION:

ACTUATOR IS SHIPPED WITH THE BATTERY UNPLUGGED FROM THE BOARD. WHEN THE ACTUATOR IS INSTALLED, PLUG THE BATTERY INTO J1 ON THE SAFE AND SECURE BOARD.

ACTUATOR WILL RUN ON DC INPUT POWER USING 4 - 20mA COMMAND SIGNAL FROM CONTROL PANEL. IF COMMAND SIGNAL COMMUNICATION SHOULD BE BROKEN OR POWER TO ACTUATOR & COMMAND SIGNAL DROP OUT, BATTERY POWER WILL DRIVE THE ACTUATOR TO THE SET FAIL POSITION AND REMAIN THERE UNTIL THE INPUT POWER COMES BACK ON. SEE MANUAL FOR SETTING THE DESIRED FAIL POSITION USING THE SELECTOR SWITCHES.

IF INPUT POWER SHOULD FAIL, BUT THE COMMAND SIGNAL IS STILL PRESENT, THE ACTUATOR WILL CONTINUE TO RUN ON BATTERY POWER UNTIL BATTERY POWER DROPS BELOW 9 VDC.

FIELD WIRING

Indelac Controls, Inc. Florence, Ky. 41042		
WIRING DIAGRAM, SAFE & SECURE, DC ACTUATOR WITH 4-20mA HIGH RESOLUTION POSITIONER, BRAKE HEATER/THERMOSTAT & 2 AUX. SWITCHES		
03JUN16	W160603	
WJR		